

Compact Wolfvision Document Camera Setup

1. Unlock cabinet where the Wolfvision document camera is stored and pull it all the way out.



2. Locate the TEAL RING and pull up.




3. Turn the power on. The Document camera lights will turn on automatically.



4. Tilt the camera head up.



5. The auto focus should remain on at all times.
6. The zoom is also located on the camera head. Zoom in or out to fit your document or 3D object on the screen.

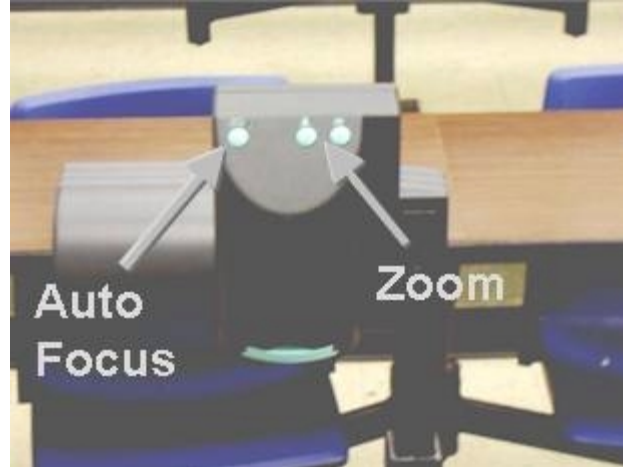

7. Your document camera is now ready to use.



8. To display a 35mm slide, insert a slide into the Slide Adapter, and latch into place.

9. Zoom in or out, to best frame the slide.

10. The remote control can be used to control the zoom, focus, iris, lights, and presets. Point the remote control at the bubble next to the camera arm.

