

Wolfvision Document Camera Instructions

1. Unlock cabinet drawer where the Wolfvision document camera is stored.
2. Carefully pull out document camera drawer.



3. Press the TEAL "Unlock" button at back of document camera.
4. While pressing "Unlock" button, allow the mirror arm to raise, until it will not go any higher. (About 70 degrees)
5. On the AMX control panel, touch Doc Cam.
6. Touch Power On.



6. Grasping the TEAL mirror plate handle, rotate the mirror until it is pointing straight down. You will see an illuminated square on the document surface when it is properly aimed.





7. Your document camera is now ready to use.



Wolfvision Document Camera Control Panels

AMX REMOTE CONTROL

DOCUMENT CAMERA CONTROLLER

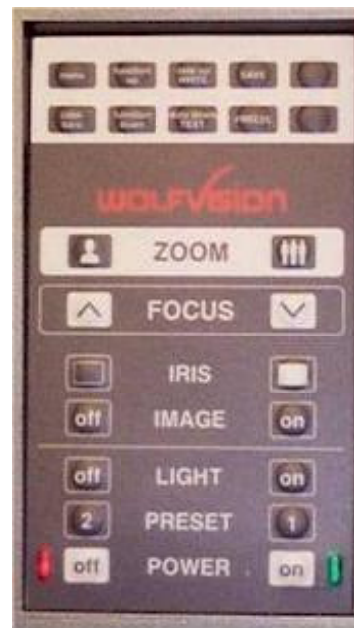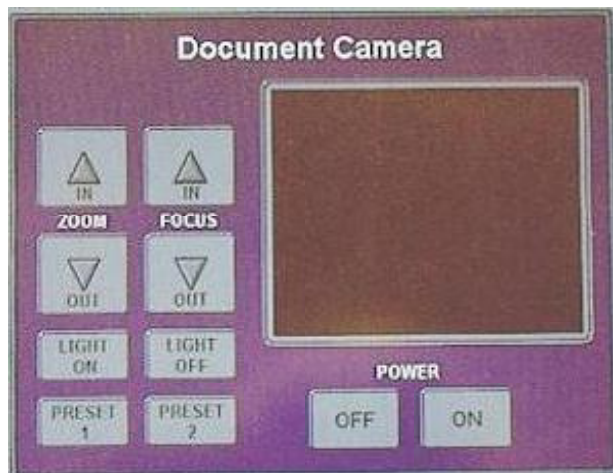

Zoom In	Zooms the camera in to make the image larger
Zoom Out	Zooms the camera out to make the image smaller
Focus	Focus the camera in or out.
Iris (doc cam only)	Open or close the iris on the camera. Black button will make the image darker, the white button will make the image brighter.
Image On (doc cam only)	Turns the image on (if it is off)
Image Off (doc cam only)	Turns the image off (project a black image)
Light On	Turns the document camera's light on (turns on when Power On is pressed).
Light Off	Turns the document camera's light off.
Preset 2,1	Choose zoom, focus, and iris preset 1 or 2.
Power On	Turn on the document camera.
Power Off	Turn off the document camera
Image Preview Window (AMX only)	The document camera's image will appear here.
Freeze (doc cam only)	Press this button to freeze the image. Press it again to release the image.
Text Enhance (doc cam only)	Enhances the appearance of text. Press again to return to normal mode.

Wolfvision Document Camera Storage

1. **POWER DOWN** the system if finished with your presentation. The document camera should now be in off mode and ready to store.
2. Press and hold down (with your left hand) the **TEAL** button on the left side of the document camera, **AS SHOWN AS NUMBER 1 BELOW**.
3. Holding down the **TEAL** button, press down the top of the **HYDRAULIC ARM** until it clicks into place, **AS SHOWN AS NUMBER 2 BELOW**. You may need to apply significant pressure to the top of the HYDRAULIC ARM. Release the **TEAL** button. **DO NOT PRESS ON THE MIRROR!**
4. When the **HYDRAULIC ARM** is locked into place, Slide the drawer closed and **LOCK**.

